

WARNING

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The rating information is located at the bottom of the unit.

INDUSTRY CANADA NOTICE:

This device complies with Industry Canada License-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.
3. This equipment complies with IC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.
- (3) ce matériel est conforme aux limites d'exposition aux rayonnements RF de IC énoncés dans un autre environnement. Ce matériel doit être installé et exploité à une distance minimale de 20 cm entre le radiateur et votre corps. CAN ICES-3(B)/NMB-3(B)

PRODUCT LIMITED WARRANTY

Simpaltek, LLC warrants to the first retail purchaser of this product that it is free from defects in materials and/or workmanship for a period of one (1) year following the original purchase date of the product, provided the product is used 1) in a home environment protected from the elements and 2) in compliance with the instructions regarding installation, operation, maintenance, and testing. This limited warranty does not cover 1) normal wear and tear 2) failures due to a) improper installation, operation, care, and maintenance b) misuse/unintended use c) abuse, negligence d) accidental damage e) unauthorized repairs or alteration f) use of improper voltage g) electrical outage short circuit 3) consumable parts such as batteries 4) acts of nature.

For products returned for warranty which are confirmed to be defective and are covered by this limited warranty, we will replace or repair the product at no extra cost to you. Products may be repaired or replaced by refurbished parts or units or by different models of similar functionality at our sole discretion. We will not cover any product installation costs or any labor costs associated with other manufacturers' products or any repair or replacement or damage costs related to other products and services.

Any warranty claim must be accompanied by the first retail proof of purchase receipt showing the original first date of purchase, which is used to determine the warranty period.

We do not warrant that the operation of the product will be error-free or uninterrupted. Except to the extent set forth in this limited warranty, the product is provided on an "as is" basis, and all implied warranties, including but not limited to any implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the applicable limited warranty period set forth, and no implied warranties will exist or apply after such period. No person or entity is authorized to assume for us any other liability in connection with the sale of this product.

For more information visit:

getnexx.com

Follow us for promotions, tips and tricks, new products and more on:

 [get.nexx](https://www.instagram.com/getnexx)  [@getnexx](https://www.facebook.com/getnexx)  [Nexx](https://www.youtube.com/Nexx)

COMPATIBILITY CHECK

DSC

Power 432	PC1616
Power 632	PC1808
Power 832	PC1832
PC580	PC1864
PC585	PC5005
PC1404	PC5008
PC1555	PC5010
PC1555MX	PC5015
PC1565	PC5016
PC1575	PC5020
PC1580	

NEO is **NOT** supported
Classic Series are **NOT** supported

Honeywell or Ademco

VISTA-21iP	VISTA-20P
VISTA-128BPT/VISTA Turbo	VISTA-20PUL
VISTA-128FBP	VISTA-50PUL
VISTA-250BPT/VISTA Turbo	VISTA-20SE
VISTA-250FBP	VISTA-30PSE
VISTA-10P	VISTA-128B
VISTA-10SE	VISTA-128BP Series
VISTA-15	VISTA-40
VISTA-15P	VISTA-50P
	VISTA-250BP

ADT or Safewatch


Safewatch 2000
Safewatch 3000

First Alert

All models


For a complete up-to-date list of compatible alarm systems, go to:
getnexx.com/nexxalarm/check

NEXX SMART ALARM CONTROLLER NXAL-100

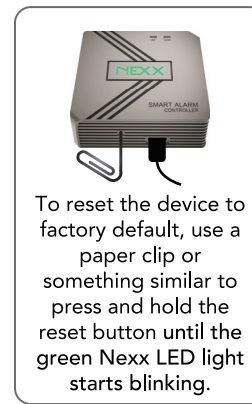

RESET

CONNECTION

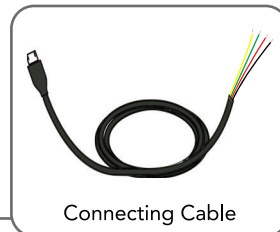

1. BEFORE YOU START CHECKLIST

- A compatible alarm system
- 2.4 GHz Wi-Fi Internet connection
- Mobile device with enabled Bluetooth
- Access to alarm system panel
- Phillips screwdriver
- Alarm code (used to arm/disarm your alarm)
- For Honeywell / Ademco / ADT / Safewatch / First Alert alarm systems: the installer code to enable a keypad address (see video for more details)



Video tutorial of the installation process, reset instructions, and more:

getnexus.com/nexxalarm/videos

If you need help, just send an email to support@getnexus.com

5. CONNECT CABLE TO NXAL-100 AND ALARM PANEL

DISCONNECT AC POWER AND BATTERY!

DSC:

Black wire → "BLK" or "AUX -"

Red wire → "RED" or "+ AUX"

Green wire → "GRN"

Yellow wire → "YEL"

Honeywell / Ademco / ADT / Safewatch / First Alert:

Black wire → 4

Red wire → 5

Green wire → 6

Yellow wire → 7



2. ENABLE KEYPAD ADDRESS (SKIP FOR DSC SYSTEMS)

*** ONLY FOR Honeywell / Ademco / ADT / Safewatch / First Alert Alarm Systems**
*** SKIP FOR DSC Systems**


You must assign an unused keypad number for Nexx Alarm. If this keypad number is already used by another existing keypad, then Nexx Alarm **WILL NOT WORK**.

There are typically 8 available keypad numbers: 16 - 23. If unused, **we suggest using 23** as the address number for **Nexx Alarm**. To enable address 23, enter the following sequence from your alarm keypad:

Installer code (default is 4112) → 800 → *196 → 1 → 0 → to exit: *99

If successful, you should hear 3 beeps.

6. NXAL-100 PLACEMENT

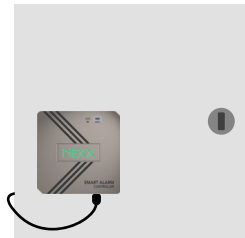

For good WiFi connection, use the included Velcro tape and attach Nexx Alarm on the exterior of the alarm panel enclosure.

Make sure you have enough space below Nexx Alarm in case you need to reset it.

7. CHECK STATUS

A. **Green LED Nexx light is blinking** - CONTINUE to next step

B. **Green LED Nexx light is NOT blinking** - RESET device

To reset the device to factory default, use a paper clip or something similar to press and hold the reset button until the green Nexx LED light starts blinking.



2.1. ENABLE KEYPAD ADDRESS (SKIP FOR DSC SYSTEMS)

*** ONLY FOR Honeywell / Ademco / ADT / Safewatch / First Alert Alarm Systems**
*** SKIP FOR DSC Systems**

The typical reason for failure to enable a keypad address is an invalid installer code.

The **default installer code is 4112**. If that does not work, you may have to reset your installer code.

Follow the instructions in this video to reset your installer code:

getnexus.com/nexxalarm/videos

If you need help, contact our support team: support@getnexus.com

8. ADD NEXX ALARM NXAL-100 TO NEXX HOME

! Before starting, make sure you have the following information:

- Brand and model number of your alarm system
- Alarm arm/disarm code
- For models other than DSC: Installer code
- For models other than DSC: Keypad address number
- Wi-Fi network name
- Wi-Fi password

Log in Nexx Home app and tap **+** to add device.

→ Follow the configuration process.



3. INSTALL MOBILE APP

Download and install from Apple App Store or Google Play Store:




Nexx Home



4. CREATE ACCOUNT


Open Nexx Home app and create an account with Nexx.

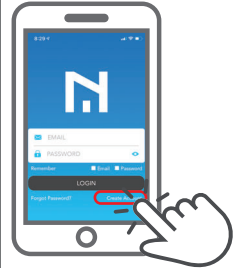

9. TEST

From Nexx Home mobile app, go to detail screen for Nexx Alarm.

Press and hold the activation button. After about 1.5 seconds, your alarm system should arm or disarm.

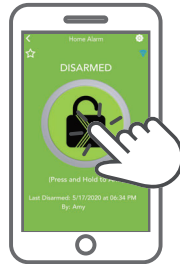

CONGRATULATIONS!

You are good to go.

For issues or questions, please email:

support@getnexus.com

For troubleshooting tips, visit:

help.getnexus.com